

The **ScentSationals Fragrance Hearth** (“warmer”) is designed to only warm scented wax cubes, such as ScentSationals Fragrance Cubes. Do not use the warmer for anything other than intended use. It is not intended to cook or heat food or drink. Do not immerse in water or use near a water source as electrical shock may result.

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical furnishing, basic precautions should always be followed, including the following:
Read all instructions before using.

DANGER—To reduce the risk of electric shock:

1. Always unplug this furnishing from the electrical outlet before cleaning.

WARNING – To reduce the risk of burns, fire, electric shock, or injury to persons:

1. Unplug from outlet before putting on or taking off parts.
2. Close supervision is necessary when this furnishing is used by, or near children, invalids, or disabled persons or pets.
3. Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.
4. Never operate this furnishing if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the furnishing to a service center for examination and repair.
5. Keep the cord away from heated surfaces.
6. Do not use outdoors. For indoor, household use only.
7. To disconnect, turn all controls to the off position, then remove plug from outlet.
8. This unit is not intended for use in wet or potentially wet locations such as tubs, showers, Jacuzzis, saunas, sinks, etc. Use in such locations may damage the warmer and/or result in electrical shock or death. Do not immerse in water or other liquid.
9. Do not touch heating surface when hot.
10. Do not let cord hang over the edge of table or counter.
11. Do not place on or near a hot gas or electric burner, or in a heated oven.
12. Use ONLY a 25w, Type G, 120v globe-shaped candelabra base light bulb in warmer. Use of higher wattage bulb may cause risk of electrical short or fire.
13. Hot wax may cause serious injury; do not touch or handle liquefied wax.
14. The warmer is designed to heat scented wax cubes only. Do not use to heat food or drink.
15. Do not use warmer for other than the intended use.
16. Do not leave warmer unattended while in operation.
17. Do not operate overnight.
18. The warmer has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit into a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to override this safety feature.
19. Do not add water to wax.

SAVE THESE INSTRUCTIONS

INSTALLATION INSTRUCTIONS

Securely attach supplied 25w Type G light bulb to the lamp holder. Place warmer on a level, solid surface only. Never use warmer on or near flammable surfaces, glass or any other surface that is not heat resistant. Never use the warmer on or near any surface that can be damaged by wax. Do not use outdoors. This product is for indoor household use only.

OPERATING INSTRUCTIONS

1. Plug into standard 120VAC electrical outlet
2. Place a scented wax cube on the warmer lid. **DO NOT OVERFILL WARMER LID.**
3. Turn switch to “on.”
4. To disconnect, turn switch to “off”, then remove plug from wall outlet.

MOVING AND STORAGE INSTRUCTIONS

1. Do not attempt to move warmer when wax in lid is hot.
2. To disconnect, turn switch to “off”, then grip plug and pull from wall outlet. Never pull on cord.
3. Clean with a damp sponge or cloth when warmer is unplugged and cool.
4. Dispose of any used wax in a dry, lined garbage can or other suitable dry container.
5. After use, allow warmer to cool down before storing.

USER MAINTENANCE

WARMER: Clean warmer with a damp cloth or sponge while warmer is cold and disconnected from the electrical outlet. Never immerse or submerge warmer in water. If light bulb burns out, turn off and unplug warmer, then replace bulb with a standard 25w, Type G, 120v globe-shaped candelabra base light bulb.

WARMER LID: Empty excess wax, then wipe with a soft paper towel while lid is still warm to remove wax residue. Before changing fragrances in lid, hand wash lid in warm soapy water and dry with a soft paper towel to help remove traces of scent.

FRAGRANCE CUBES: ScentSationals Fragrance Cubes are recommended and can be re-used with good results as long as fragrance has not been depleted from wax. Recycle/reuse fragrance by carefully pouring liquefied wax back into original container, and let solidify before moving or closing lid of container. However, fragrance will eventually become depleted from the wax through melting and evaporation. When wax is no longer fragrant, discard in a dry, lined garbage can or other suitable dry container.

HELPFUL HINTS:

- ☺ Turn on warmer for 1 hour in the morning and 1 hour in the evening to fill the room with lasting fragrance.
- ☺ Automatic timers are available that can be purchased for use with the warmer to turn on/off automatically.
- ☺ Use 1 cube from a fragrance cube package at a time. Recycle/reuse that same cube until fragrance is depleted.

STATEMENT OF LIMITED WARRANTY

What this Warranty Covers

RIMPORTS (USA) LLC warrants that each warmer is free from defects in materials and workmanship for a period of thirty (30) days. The warranty period for the warmer starts on the original Date of Purchase. The date on your invoice or sales receipt is the Date of Purchase.

THESE WARRANTIES ARE YOUR EXCLUSIVE WARRANTIES AND REPLACE ALL OTHER WARRANTIES OR CONDITIONS, EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OR CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. SOME STATES OR JURISDICTIONS DO NOT ALLOW THE EXCLUSION OF EXPRESSED OR IMPLIED WARRANTIES, SO THE ABOVE EXCLUSION MAY NOT APPLY TO YOU. IN THAT EVENT, SUCH WARRANTIES ARE LIMITED IN DURATION TO THE WARRANTY PERIOD. NO WARRANTIES APPLY AFTER THAT PERIOD. SOME STATES OR JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

What this Warranty Does Not Cover

This warranty does not cover the following:

1. Failure resulting from misuse (including but not limited to use that is not specified or specifically cautioned against in the safety instructions that accompany the candle warmer), use in a business or for commercial purposes, accident, modification, unsuitable physical or operating environment, or improper maintenance by you; and
2. Failure caused by a product for which RIMPORTS (USA) LLC is not responsible.

The warranty is voided by removal or alteration of identification labels on the warmer or disassembly of any component of the warmer.

If the warmer does not function as warranted during the warranty period, return the warmer to your place of purchase for a refund or exchange.

If you have any questions regarding these warranties, please contact us:

RIMPORTS (USA) LLC
201 East Bay Blvd.
Provo, UT 84606 USA

Limitation of Liability

Circumstances may arise where, because of a default on RIMPORTS (USA) LLC's part or other liability, you are entitled to recover damages from RIMPORTS (USA) LLC. In each such instance, regardless of the basis on which you are entitled to claim damages from RIMPORTS (USA) LLC (including fundamental breach, negligence, misrepresentation, or other contract or tort claim), except for any liability that cannot be waived or limited by applicable laws, RIMPORTS (USA) LLC is liable for no more than:

1. Damages for bodily injury (including death); and
2. The amount of any actual direct damages to property or tangible personal property up to but not exceeding the amount paid for the warmer that is subject of the claim. This limit also applies to RIMPORTS (USA) LLC's suppliers and your reseller. It is the maximum for which RIMPORTS (USA) LLC, its suppliers, and your reseller are collectively responsible.

UNDER NO CIRCUMSTANCES IS RIMPORTS (USA) LLC, ITS SUPPLIERS OR RESELLERS LIABLE FOR ANY OF THE FOLLOWING EVEN IF INFORMED OF THEIR POSSIBILITY: 1) THIRD PARTY CLAIMS AGAINST YOU FOR DAMAGES (OTHER THAN THOSE UNDER THE FIRST ITEM LISTED ABOVE); 2) SPECIAL, INCIDENTAL, OR INDIRECT DAMAGES OR FOR ANY ECONOMIC CONSEQUENTIAL DAMAGES; OR 3) LOST PROFITS, BUSINESS REVENUE, GOODWILL OR ANTICIPATED SAVINGS. SOME STATES OR JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. SOME STATES OR JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

THESE WARRANTIES GIVE YOU SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE OR JURISDICTION TO JURISDICTION.